

installation instruction

Precautions:

1: Please read the manual before installation, please do not install it by yourself, so as not to damage the original car parts.

2: Check whether the received goods are complete (please see the photo)

3: When disassembling the car, do not put the disassembled parts of the original car in the car to avoid scratching the interior of the original car. The disassembled screws and buckles should be put in place to avoid missing parts during restoration.

4: The equipped control box is divided into three ports of power-on 1, 2, and 3, channel 1 is a foot socket lamp, power-on 2, 3 are 4 doors + air outlets (please see the attached drawings for the wiring diagram)

5: The wiring in the car should be planned well. When routing the wires, compare how to route the wires, and each wire is marked with a good plug. (Do not leave the car in the energized state when unplugging the original car)

 
 
6: After all installations are completed, do not restore the original car parts first, and power on to check whether the ambient light is normally on and whether the function is normal. The original car steering wheel plug needs to be plugged in before powering on

Product list

Vents



foot lights

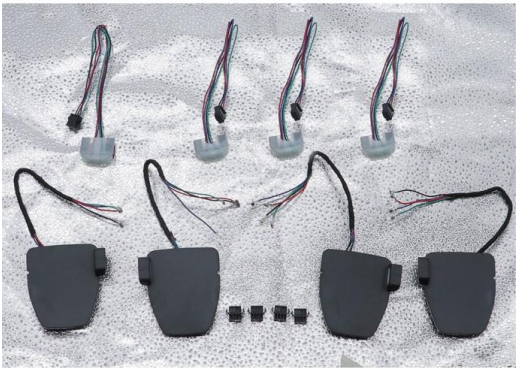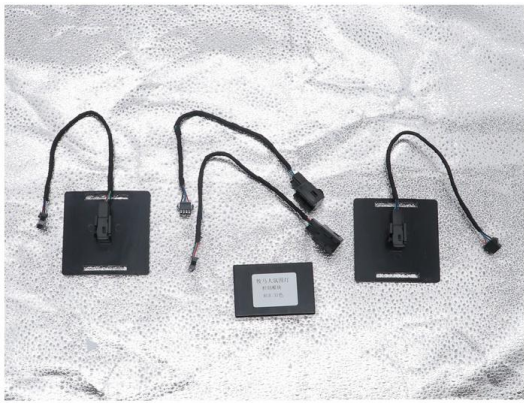

Interior door bowl lights

Wire harness



Remove the central control

 




撬开盖板里面有螺丝（左右各一个）





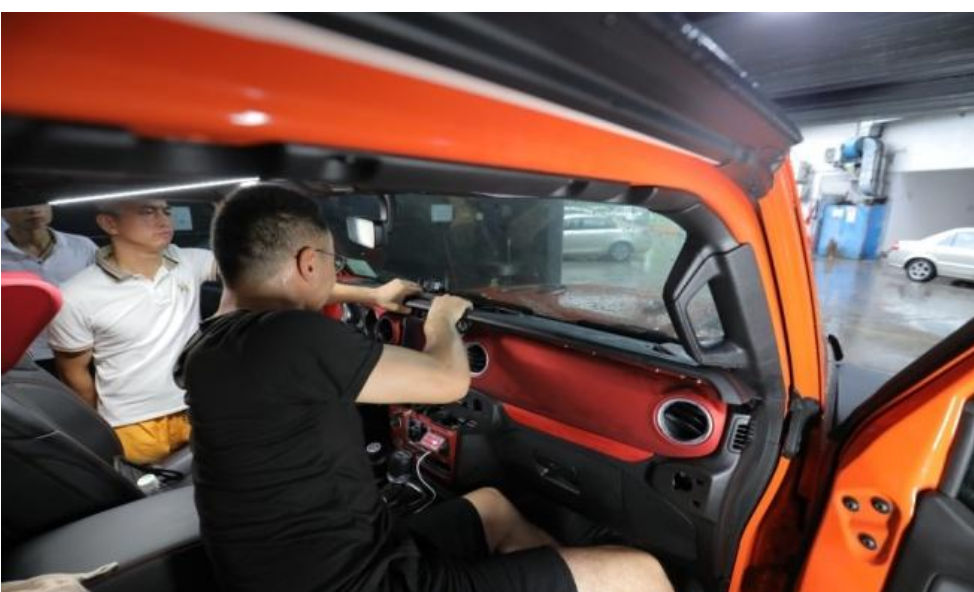

Picture of the instrument panel removed

(The back is all buckles, it will be a little tight at the first disassembly, be careful not to use brute force, so as not to damage the original car parts)



Dismantled the original car air-conditioning outlet panel



Demolition of the original car steering wheel

Tip: If you don't want to remove the plug on the back of the steering wheel, you can choose, (because the steering wheel button OK is only to control the single color to change the color/turn off the ambient light)









 
安装出风口氛围灯先把线布好, 预留好位置



将铺线的预留插头跟出风口炮筒插头对插



将出风口炮筒跟出风口对插

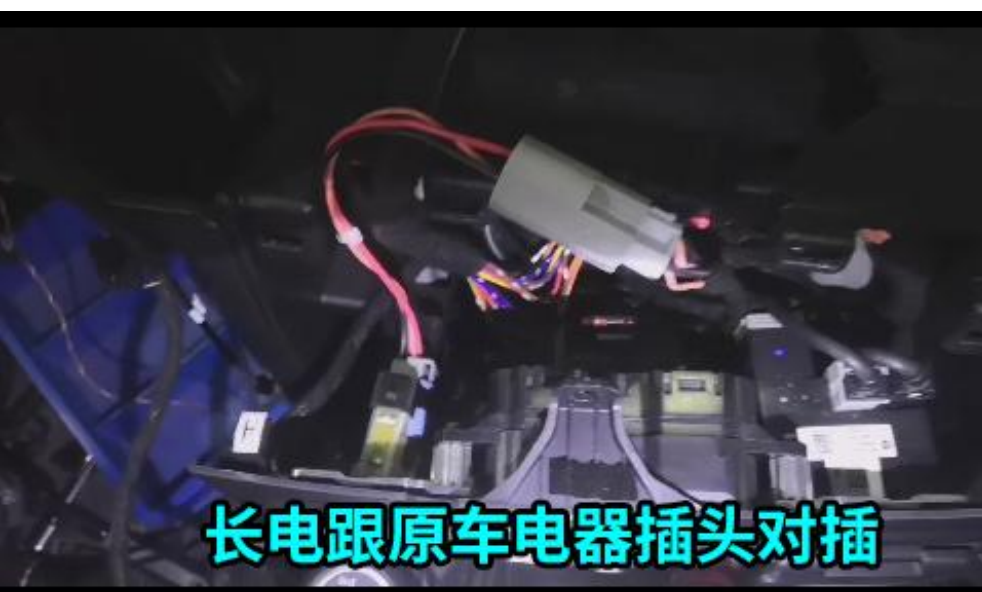

The steering wheel OK button controls 2 functions

 
(1; press OK twice in quick succession to switch colors,

2; long press the OK button for 5 seconds to turn off the ambient light of the whole car)



The process of dismantling the door



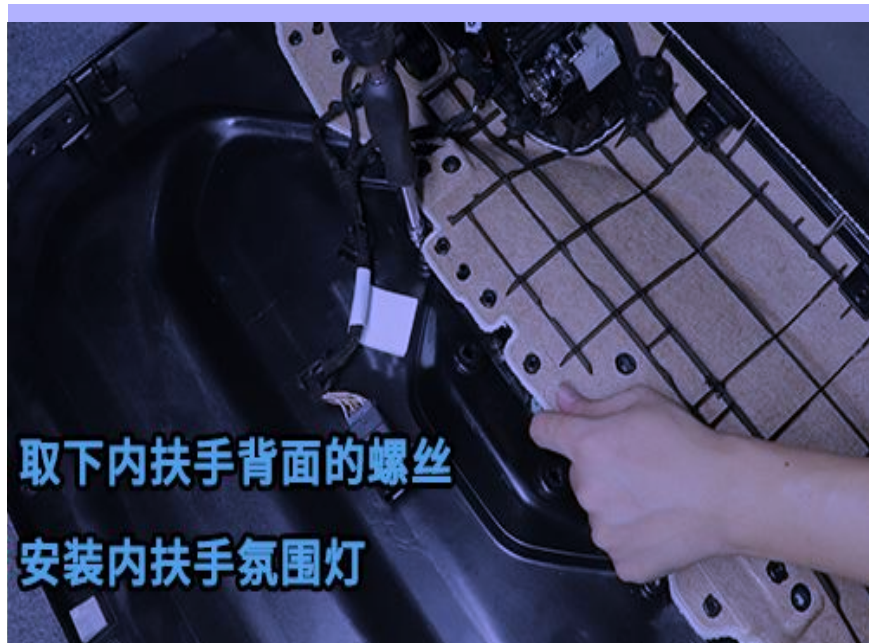

Picture of the end of the overall installation

The lines of all lights are led to the main driving position, and the lights of the whole car are controlled by a control box

